

FIBRE OPTIC PASSIVE COMPONENTS

ADAPTERS

ST ADAPTOR

An optical fibre adaptor or uniter is used to mate two connectors together, usually mounted in a distribution panel or wall box. In most cases it is the critical part of the system that aligns the ferrule part of the connectors keeping the fibres in perfect alignment.

Generally there are two types of alignment sleeve within an adaptor, phosphor bronze for multimode or zirconia (ceramic) for single mode.



Ordering information

Description	Part No.
ST SM Simplex Adaptor, Zirconia Sleeve	ADSTSXSMM
ST SM Duplex Adaptor, Zirconia Sleeve	ADSTDXSMM
ST MM Simplex Adaptor, PB Sleeve	ADCSTSM
ST MM Duplex Adaptor, PB Sleeve	ADCDTSM